 




Quick installation guide for exit button 7466 and 7467

A permanent 12-24 VDC supply is required to operate the touchless series FXIT BUTTON, and provide all its functions below.

Contact



The EXIT Button is default with sensitive distance is fixed to approx 10-12 cm.

The product is based on Infrared technology, Consideration must be taken to where and how to mount the product to minimize external disturbances. For example:

- Do not face the infrared sensor directly into sunlight.
- Do not face the infrared sensor towards a window or glass walls
- Reflectors or clothing with reflectors can affect the infrared beams to increase the distance







Contact info

Seriline AB

Gustavslundsvägen 50 167 51 Bromma | Sweden +46(0)10-150 75 00

info@seriline.com

